


Tech for Happier & Wholesome Living



# Door Lock Remote: User Manual

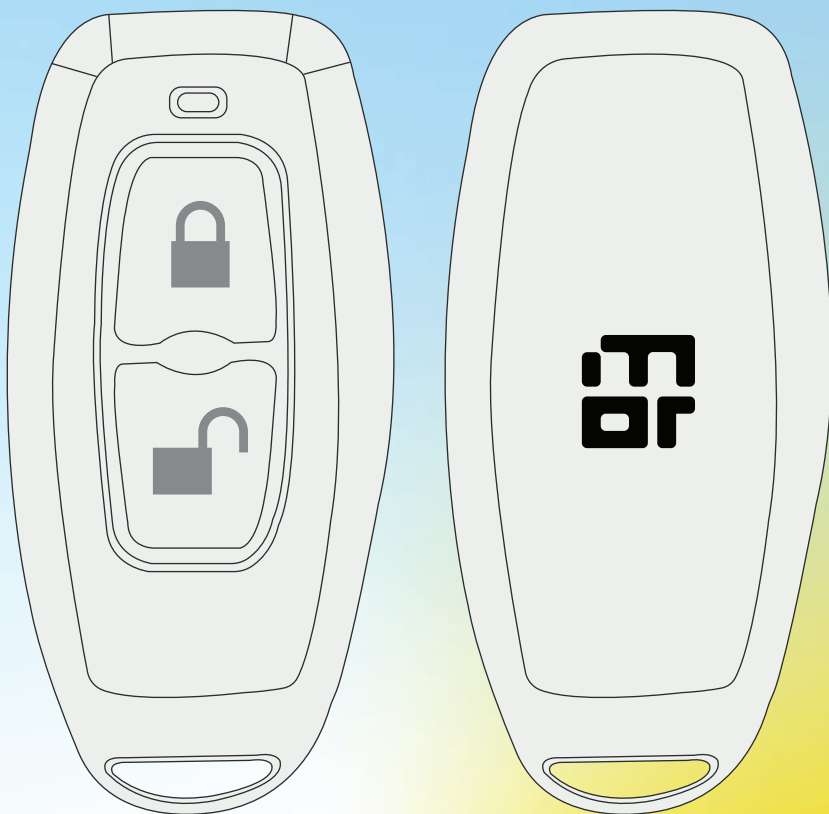


# Introduction

## 1. Specifications

Model	Mygate Door Remote
Dimensions	60.6mm X 29mm X 11.7mm
Material	Plastic
Frequency	2.4 GHz
Power	Button Battery (CR2032)
Voltage	3V


## 2. Dimension

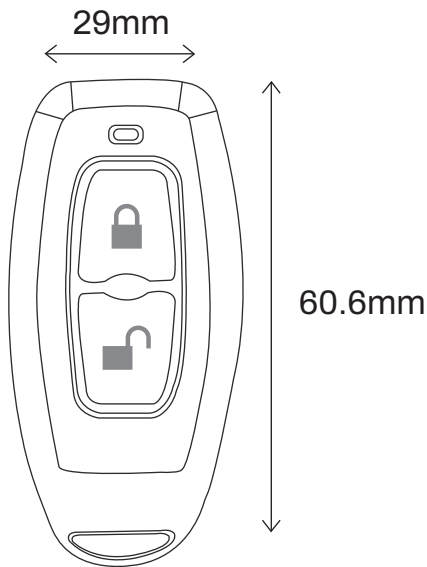

# Understanding Door Lock Remote Lights


## Door remote key - Know the difference

Unlocking	Press the unlocking key to unlock, the status light flickers
Locking	Press the locking key to lock, the status light flickers
Low power	The status light flickers slowly on locking/unlocking

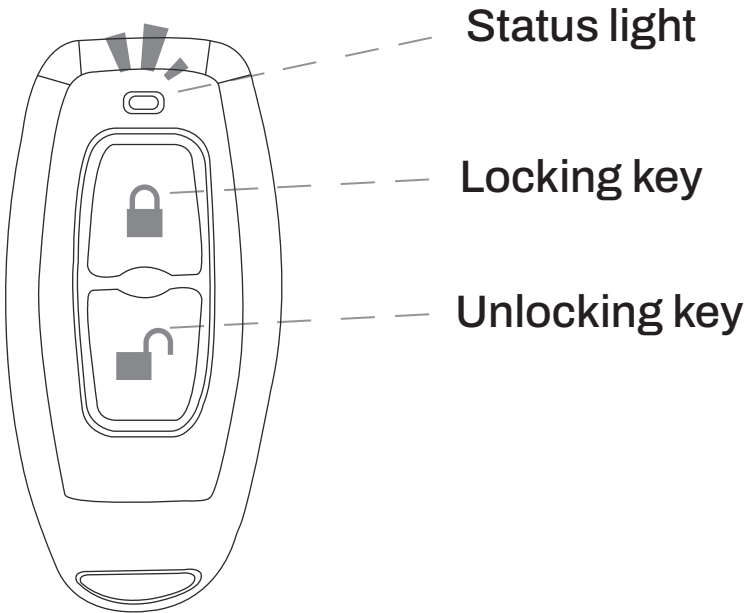


# App configurations steps


## How to configure door sensor via app

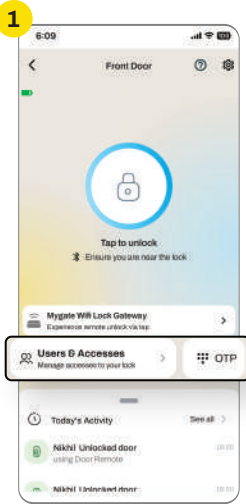


Go to Users and  
Accesses

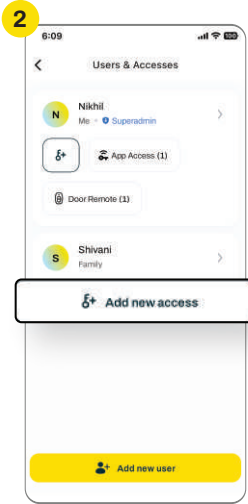

Select "Key" tab

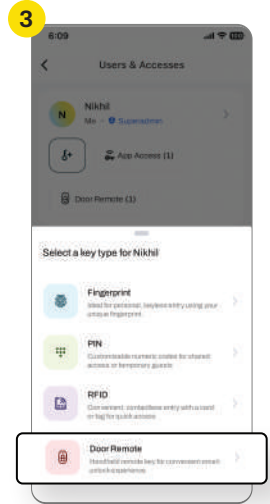


Choose "Door Remote"  
from dropdown

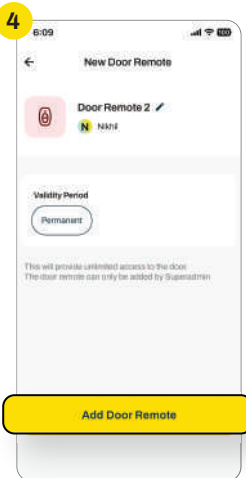

Click "Add Door  
Remote"




Your device will  
start pairing

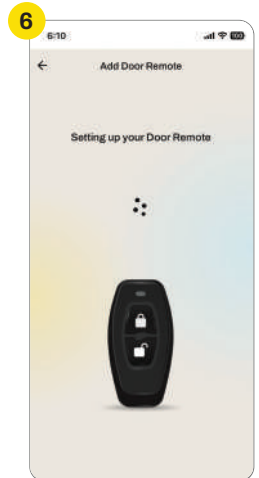


Verify successful  
connection

## Battery replacement

- 1 Remove the cover of the Remote

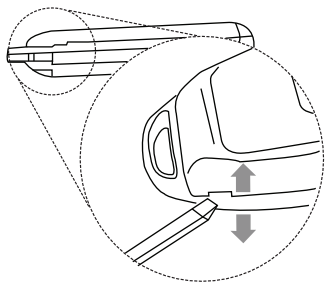

- 2 Remove the mainboard from the housing

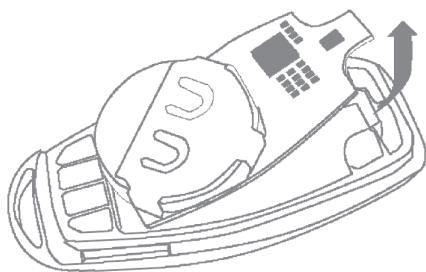

- 3 Replace the battery and reinstall the cover

