


2.8 Replacing Ink Tanks

1. Open the ink door. The ink door is a spring loaded magnetic latching door. Pull to open.



2. After a few seconds, “Pen Change” should appear in the DFE. It is now safe to remove the ink.

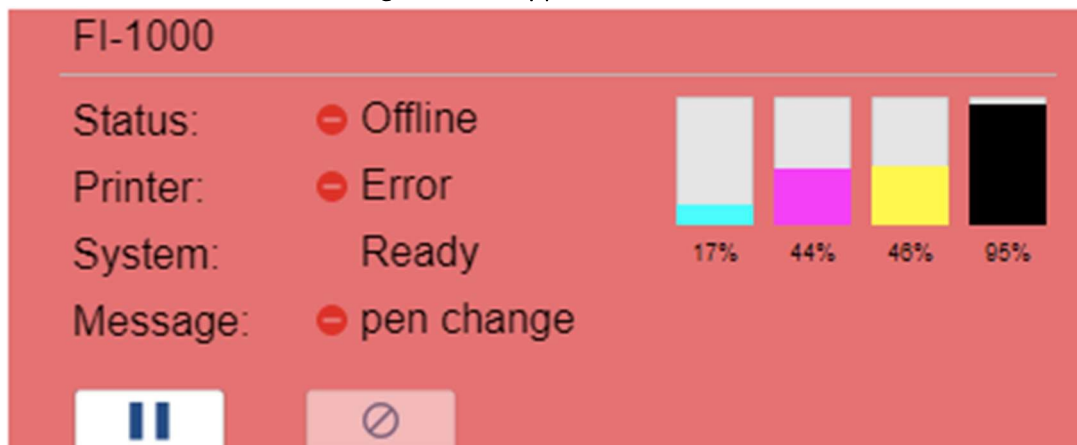

3. Remove the used ink cartridge by pressing it in to unlatch it. Then pull out the cartridge.



4. Install the new ink cartridge by sliding the cartridge into the slot. Push in far enough so that the cartridge latches in.
5. Close the ink door.

Note: You should notice the “Pen Change” error clear after a few seconds. If the error does not clear, shift the ink door slightly up or down. Doing so will ensure that the door sensor is tripped.