
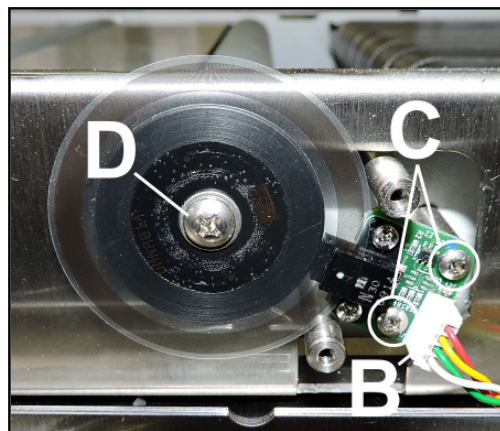


Replace Media Path Encoder Assembly

1. Open Clamshell.
2. Loosen (2) screws [A] securing Encoder Cover to the Side Frame. Then remove screws.
Tip: Loosen both screws before removing either screw. This will prevent the cover from spinning and damaging the encoder wheel, when you break the screws loose. Start both screws before tightening either screw.
3. Disconnect wire harness [B] from Encoder Sensor Assembly PC Board.
4. Remove (2) screws [C] securing Encoder Sensor Assembly to Side Frame and pull away from Encoder Wheel. **NOTE: Be careful not to damage Wheel.**
5. Remove (1) screw and washer [D] holding Encoder Wheel to Roller Shaft. Remove Encoder Wheel.
6. **Install in reverse order.**

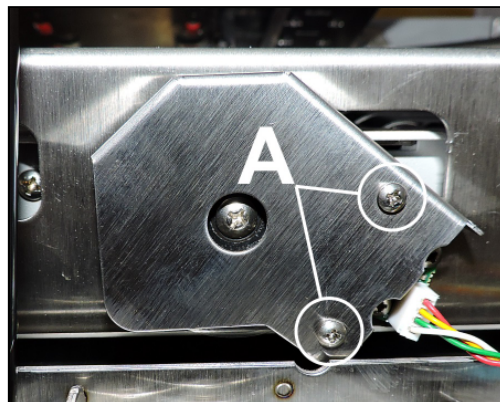

Replace Ink Tank Latches

Ink Tanks must be removed prior to replacing latches. See “Replace Ink Tanks” in Maintenance Section. Printer must be flat on a level surface.

[A] Open Latch.

[B] Remove (2) screws located on underside of latch hinge block. (*You may need a mirror to see screw heads.*) Remove Latch Assembly.

CAUTION

LATCHES ARE SPRING-LOADED, BE CAREFUL THAT SPRINGS DO NOT FLY OFF.

